Q-Link℠

The Commodore® Connection.

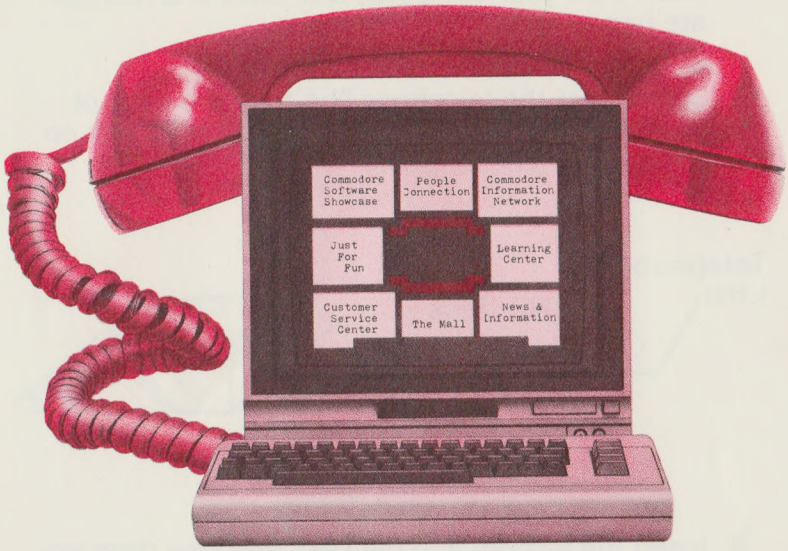

QUICK CONNECT GUIDE

For Your Commodore® Modem/ 300

GETTING STARTED

With Your New Modem

To set up your Commodore Modem/300 (Model 1660) and connect to QuantumLink, follow these instructions:

1. Make sure your computer, disk drive and monitor are turned OFF.

2. Disconnect the telephone line from the base of your telephone and plug it into the LINE Jack on the modem (see diagram).

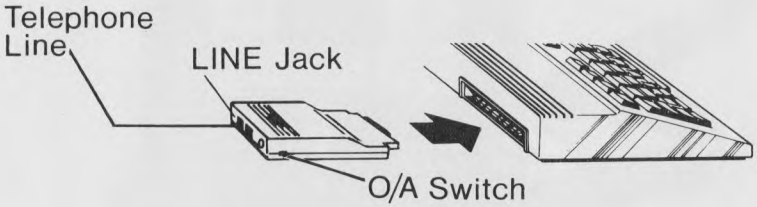

3. Insert the modem into the User Port (see diagram).

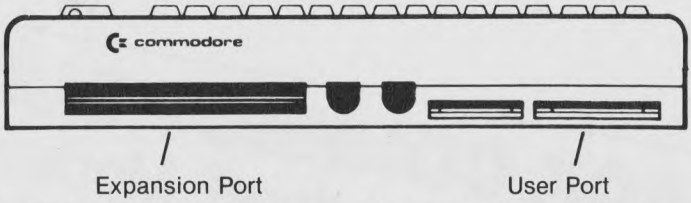

4. Make sure the modem switch is set as follows:

Switch	Setting
O/A (Originate/Answer)	O

5. If you own a Commodore 64:
    - Turn on the power to your computer, disk drive and monitor.
    - Insert the Q-Link program disk into your disk drive.
    - When you see READY on your screen, type:
      LOAD"*",8,1 (and press RETURN)

   If you own a Commodore 128:
    - Turn on your monitor and disk drive
    - Make sure your computer is turned *off*
    - Insert the Q-Link program disk into your disk drive.
    - Turn on your computer
    - Your disk drive will *automatically* load Q-Link (no typing is needed)

6. When asked to identify your modem type, select Commodore 1660 and press F1.

7. When asked for your phone type, select PULSE and press F1.

8. When asked for your local access number, check the listing of numbers in your Getting Started Guide, enter the access number for your city (including the symbol shown in front of the number), and press F1. Then select SIGN ON TO Q-LINK and press F1.

9. Once you're connected to Q-LInk, you should follow the instructions in your Getting Started Guide.

The Commodore Connection.

8619 Westwood Center Drive • Vienna, Virginia 22180
703/448-8700

1-800-392-8200
(In Canada call 703-883-0788)

Q-15-00

319900-01
QL-33